

GPRS error codes and problems:

There are several GPRS error codes that can help you to fix problems when you try to send data using GPRS.

When the GPRS session starts the tracking unit will send the following data to the serial port:

GPRS session started.

When the GPRS session is completed the following data will be send to the serial port:

GPRS session completed without error.

Error messages will be reported as follows.

The error messages are sent to the serial port at 9600-baud rate.

There are several Basic error messages:

GPRS Error : Invalid dial-up ! (the dial-up string is not valid)

GPRS Error : Invalid User name or password !

GPRS Error : No assigned IP address ! (GPRS network error)

GPRS Error : Cannot logon to SMTP server ! (Invalid SMTP server IP address)

GPRS Error : Mail from ! (the mail from option not accepted by SMTP server)

GPRS Error : Mail to ! (the mail to option not accepted by SMTP server)

GPRS Error : Mail Data input ! (the mail data command not accepted by SMTP server)

There are several other advanced GPRS errors. These errors are single letters from A to Z.

If you receive this error please contact your sales office for advice.